AE1771 (Reviewed)

Backup Electric Tom Scherer. NDSU Extension Agricultural Engineer Ken Hellevang, NDSU Extension Agricultural Engineer for Houses

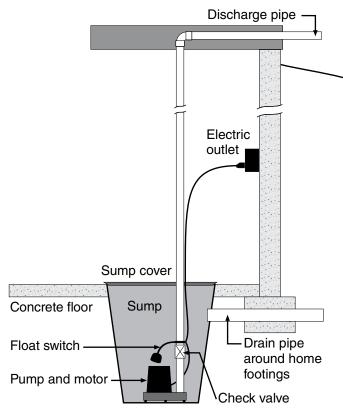


Figure 1. Typical house sump pump system.

NDSU

EXTENSION

North Dakota State University Fargo, North Dakota Reviewed March 2021

Many houses have basements with a drainage system around the foundation that intercepts ground water. In some cities and towns, the house drainage system is connected to the city sanitary sewer system, but more commonly, the drainage system directs water into a sump in the basement.

Within the sump is an electric-powered pump that moves water to the outdoors and discharges it away from the house (Figure 1).

The sump pump is the first line of defense to keep water out of the basement, but in some circumstances, it will stop pumping. The most common is a loss of utilityprovided power. This often happens during thunderstorms and flooding situations when the sump pump is needed most.

Sometimes the pump stops working due to motor burnout. float switch malfunction or some other cause. As a precaution, many homeowners have a replacement sump pump ready to install, but for those situations when no one is home (vacations, travelling, etc.) having a backup sump pump is a good idea. A backup pump also will help if water entering the sump exceeds the capacity of the primary pump.

Typical Electric Backup Sump Pump

The typical backup pump system has a 12volt direct current (DC) motor powered by a battery connected to a specially designed trickle charger. A regular battery charger will not work for this type of installation except in an emergency.

The backup pump has its own check valve mounted in the outlet pipe (Figure 2). The discharge from the backup pump is connected to the discharge pipe of the primary sump pump. In Figure 3, the primary and backup sump pumps are connected so that the inlet to both pumps are at the same level and rest on the bottom of the sump. However, in many installations, the backup pump is mounted above the primary sump pump.

Figure 4 shows the two pumps sitting on the bottom of the sump. The backup pump is on the left and the main pump is on the right. The float switch that controls the main pump is near the bottom of the sump. The gray float above the backup pump is set at a level where it will turn on only when the water is above the turn-on level for the main pump (Figure 5). The backup pump float should be set so that it turns on the pump when the water level is slightly below the sump inlet.

The float switch on the backup pump is connected to a battery (Figure 6). When not in use, a specially designed battery charger keeps the battery voltage above 12 volts. The battery and charger are shown in Figure 7.

For protection from water, the charger is located 3 to 4 feet above the floor of the basement and near the sump. The battery is often in a plastic battery box on the floor. The charger and battery locations should be easily accessible for maintenance and in a dry environment (no dripping water).

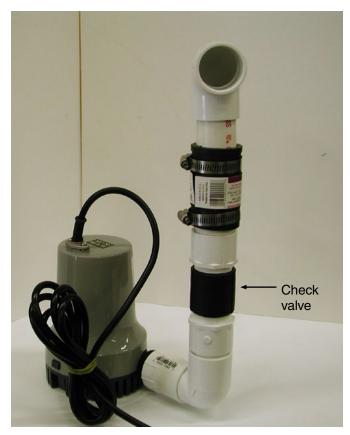


Figure 2. Backup sump pump with attached discharge piping. The check valve is located just above the elbow.



Figure 3. Pipe connections of the backup pump and the primary sump pump.



Figure 4. Primary and backup pumps in the bottom of the sump.

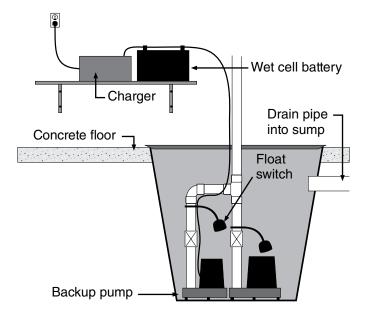


Figure 6. Electrical connections for just the backup sump pump.

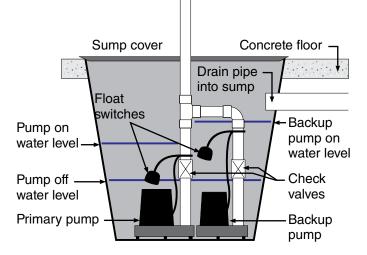


Figure 5. Float turn-on water level relationship between the primary and backup pumps.



Figure 7. Charger and battery with the primary and backup pumps.

Battery Selection

When the primary pump stops working due to an interruption of power or a malfunction, the backup pump must run to protect the basement. Because emergency situations happen very rarely, making sure the battery is fully charged and in good condition is important.

Types of 12-volt Lead-acid Batteries

Two types of lead acid batteries are available. Most people are familiar with the standard lead-acid vehicle battery used in a car. These batteries are designed to provide a large amount of current for a short period of time.

The output and capacity of these batteries are rated in cold cranking amps (CCA). The number of CCAs often is printed on top of the battery case. **This is not the type of battery to use with a backup sump pump except in an emergency.**

A deep-cycle lead-acid battery (sometimes called a marine battery) is recommended for backup sump pumps. This type of battery is rated in ampere-hours (AH). The standard AH rating indicates the number of amps provided in excess of 20 hours. For example, if a battery has a rating of 80 AH, it would provide 4 amps an hour (80/20) for 20 hours. The AH rating usually is printed on the top of the battery.

Combination 12-volt lead-acid batteries have a CCA and an AH rating. However, for backup sump pumps, this type is not as preferable as a deep-cycle battery. Some versions of the lead-acid battery that you may find in stores are the Wet Cell, Gel Cell and Absorbed Glass Mat (AGM).

The Gel Cell and AGM are preferred for backup sump pumps because the plates do not sulfate easily, the terminals don't corrode and the chance of a hydrogen gas explosion occurring is small. These are important considerations because the battery will be located in the basement, which often has higher humidity than outside air. However, they are specialty batteries and often cost much more than the Wet Cell; plus, they may require a special charger.

Backup sump pumps often are sold as complete units and contain most of the necessary parts, including a charger. The battery and some plumbing pieces are sold separately. When purchasing a battery, check the backup pump manual to find out if the manufacturer recommends a maximum AH battery rating for the pump.

Battery Performance

A question often asked is: "How long will the backup pump provide protection?" To answer this question, we created a test setup that mimicked a common sump pump installation in a home. The vertical lift from the pump to the discharge was about 10 feet through a 2-inch-diameter discharge pipe. Figure 8 shows the two pumps when water is flowing into the sump.

The three conditions we tested were:

1. For continuous operation: How many hours of protection will a battery with a certain AH rating provide if the pump runs continuously?

This is the worst-case scenario and it means a lot of water is entering the tile system.

To answer this question we tested three 12-volt sealed lead-acid batteries rated at 40, 75 and 84 ampere-hours. For each test, the batteries were fully charged, power was removed from the primary pump and the charger was turned off. The water flow was adjusted to match the flow rate of the pump. The flow rate of the backup pump was about 14 gallons per minute with a fully charged battery.

We let the pump run continuously until it stopped pumping water. At the start of each test, the battery voltage was about 12.7 VDC (voltage in direct current circuit), and the current draw while the pump was operating was about 10 amps. The voltage and current decreased during the tests.

As shown in Figure 9, a 40-AH battery will provide less than four hours of continuous pumping before water enters the basement, whereas a battery rated at 120 AH will provide about 11 hours of protection. The 120 AH battery response (red marker) was estimated using the linear relationship of the other three points. Thus, the answer to question one would be to purchase a battery with the highest AH rating recommended by the manufacturer or that provides protection for the number of hours restoring power in your area commonly takes.



Figure 8. Backup pump test stand showing water flowing into sump that contains the two pumps. The charger is in the lower left and on the right is the ultrasonic flow meter used to measure the flow rate.

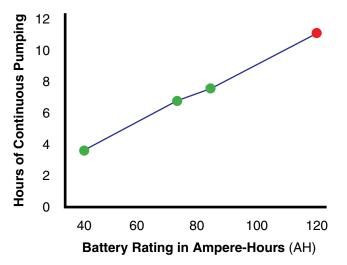


Figure 9. The duration of continuous pumping by a backup sump pump based on the rated AH of the battery. The 120 AH point is estimated.

2. For intermittent operation: How many hours of protection will a battery with a certain AH rating provide if the pump runs every four minutes?

This is a common scenario for many homeowners during heavy rain or flooding events.

To answer this question, we only tested the 75-AH battery. Between the on/off float levels, the volume in the sump was about 6 gallons. The flow into the sump was adjusted to approximately 1.5 gallons per minute (gpm), so the pump ran every four minutes for about 30 seconds.

At the start of the test, the battery voltage was about 12.7 volts (under load) and the pump flow rate was about 14 gpm. We found that the battery had time to recover some voltage between pumping events.

After 60 hours of operation, the battery voltage dropped to about 10 volts and the pump flow rate was about 9 gpm. Although the pump was running, flow stopped within 30 minutes because it could not overcome the 10 feet of vertical lift. Thus, the 75-AH-rated battery provided at least 60 hours of basement water protection starting with a fully charged battery.

Based on this pumping test, we assumed a proportional response based on the battery AH rating. Thus the 40-AH battery will provide about 32 hours, the 84-AH battery about 68 hours and a 120-AH battery about 96 hours of basement water protection (Figure 10).

During many large rain or flooding events, the sump pump might run continuously for a couple of hours, but then the duration between pumping cycles would increase as the flow into the sump decreases.

3. Primary pump failure: How long will the backup pump operate?

In a situation in which the primary sump pump fails but utility power still is available, the backup pump will run for many days because the charger will maintain optimum battery voltage between pumping events.

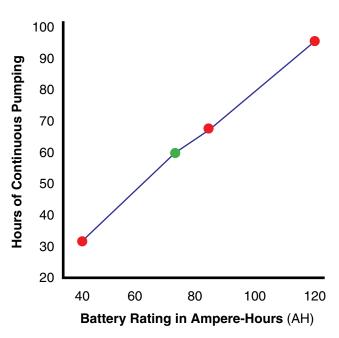


Figure 10. The hours of operation of a backup sump pump running every four minutes based on the rated AH of the battery. The red markers are estimated assuming a linear response.

Battery Maintenance

The battery, being the power source for the backup pump, requires periodic maintenance checks to make sure it is fully charged and operational. The battery voltage should be checked every six months. To test the battery, a voltmeter or volt-ohm meter (VOM) will be required. They are inexpensive and can be purchased at home supply or hardware stores.

The first test is to measure the static voltage of a fully charged battery. Unplug the charger, wait a couple of minutes, and then measure the voltage between the battery's positive and negative terminals. An acceptable range is from 12.3 to more than 13 volts. If the voltage is less than 12 volts, the battery may be getting old and losing its ability to hold a charge.

The second test is to measure the voltage of the battery under load. Again, the battery must be fully charged. The measurement must be made while the pump is running. If water is flowing into the sump and the primary pump is operating periodically, then unplug it and the battery charger and let the water rise in the sump until the backup pump comes on. While the backup pump is operating, measure the voltage across the battery terminals. The voltage should be above 12.1 volts. If it is less than 11.6 volts, consider replacing the battery.

If you want to perform the second test but no water is running into the sump, again, unplug the battery charger and the primary pump. Add water to the sump until the backup pump runs, then measure the voltage.


Prolonged Electric Outage

With extended electrical outages, if someone is in the house, a 1,500-watt generator can be used to power the primary pump and battery charger. If you have no generator and the battery is running down, a standard 12-volt vehicle battery can be used in an emergency. Most riding lawn mowers, cars, pickups and tractors have 12-volt batteries, but a battery with a high CCA rating will provide the longest protection.

Electric Backup Supposed by the second secon

Quick Tips for Battery Selection

- 1. Use a deep-cycle lead-acid battery with a backup sump pump.
- 2. The ampere-hour (AH) rating determines the hours of protection.
- 3. Purchase a battery with an AH rating near the maximum recommended by the backup sump pump manufacturer. Typically, it will be around 120 AH.
- 4. If the primary battery runs down in an emergency, a standard vehicle battery can be used to provide power to the backup sump pump.
- 5. Check every six months to ensure that the battery maintains an adequate charge and has no corrosion.

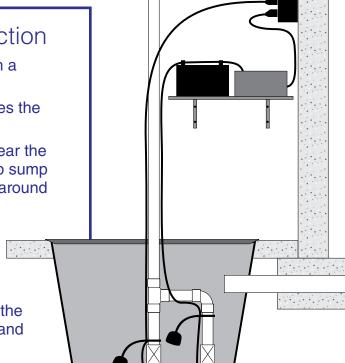

Acknowledgements:

This publication was funded in part by the Office of Renewable Energy and Energy Efficiency, North Dakota Department of Commerce.

Special thanks to James Moos and Elton Solseng, NDSU Agricultural and Biosystems Engineering, for setting up the test stand and helping run and record results from these tests.

NDSU EX

EXTENSION

For more information on this and other topics, see www.ag.ndsu.edu

The NDSU Extension does not endorse commercial products or companies even though reference may be made to tradenames, trademarks or service names. NDSU encourages you to use and share this content, but please do so under the conditions of our Creative Commons license. You may copy, distribute, transmit and adapt this work as long as you give full attribution, don't use the work for commercial purposes and share your resulting work similarly. For more information, visit www.ag.ndsu.edu/agcomm/creative-commons.

County commissions, North Dakota State University and U.S. Department of Agriculture cooperating. NDSU does not discriminate in its programs and activities on the basis of age, color, gender expression/identity, genetic information, marital status, national origin, participation in lawful off-campus activity, physical or mental disability, pregnancy, public assistance status, race, religion, sex, sexual orientation, spousal relationship to current employee, or veteran status, as applicable. Direct inquiries to Vice Provost for Title IX/ADA Coordinator, Old Main 201, NDSU Main Campus, 701-231-7708, ndsu.eoaa@ndsu.edu. This publication will be made available in alternative formats for people with disabilities upon request, 701-231-7881.